



sign	Function	Interface Description			
J1	Battery holder				
CN2	SATA				
CN7	SATA(reserved)				
CN5	10Pin front panel interface(1.25*10P)	1:+3.3	2:GND	3:IR	4:COL2
		5:COL1	6:ROW2	7:COL3	8:ROW1
		9:ALARM	10:REC		
J16	RS232				
J19	CR1220 battery holder compatible				
J15	SATA power extension socket	1:+5	2:GND	3:GND	4:+12
CN6	12V input				
J10	2*USB				
CN3	USB Extension interface	1:+5	2:USB_DM	3:USB_DP	4:GND
J6	RJ45				
J7	HDMI				
J8	VGA				
J14	VGA expansion interface (compatible)				
J18	Audio extension socket (compatible)				
J17	3.5mm Audio In/Output interface				
CN1	Fan seat	1:+12	2:GND		
ANT3	Antenna interface				
ANT4	Antenna interface				